

The logo for KEYA, featuring the word "KEYA" in a stylized, white, geometric font. The letters are composed of straight lines and right angles, giving it a modern, architectural feel. A small registered trademark symbol (®) is located at the top right of the letter 'A'.

KEYA[®]

UNLOCK INNOVATION

The background of the cover is a solid blue color. On the right side, there are several thin, white, curved lines that sweep across the page from the top right towards the bottom left, creating a sense of motion and depth. These lines are more densely packed in some areas and more sparse in others, creating a dynamic, wave-like pattern.

**KEYA CONTROL
INSTALLATION
MANUAL**

INDEX

1. Software installation and execution guide	3
2. Log in	4
3. Keya Control Software Interface	6
4. Keya Control Settings Panel	7
5. Keya Control Datasheet	8

1. Software installation and execution guide

- I. Download the file and unzip the program
- II. Run the installation program and follow the steps:

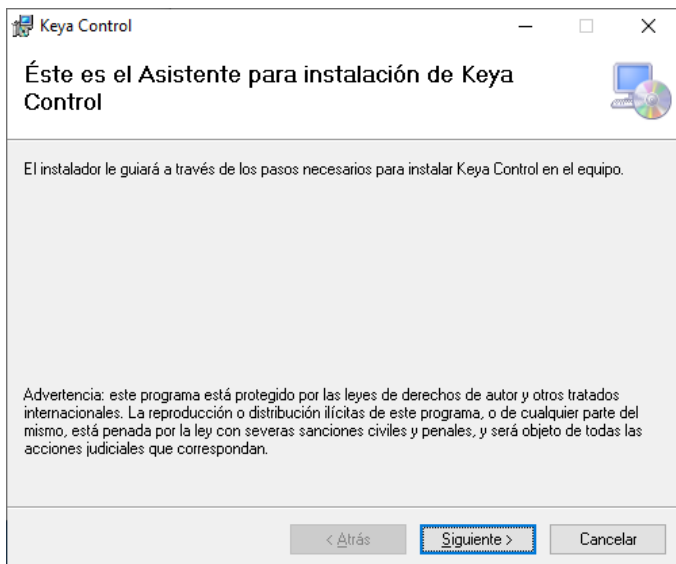


Figure 1: Installation process

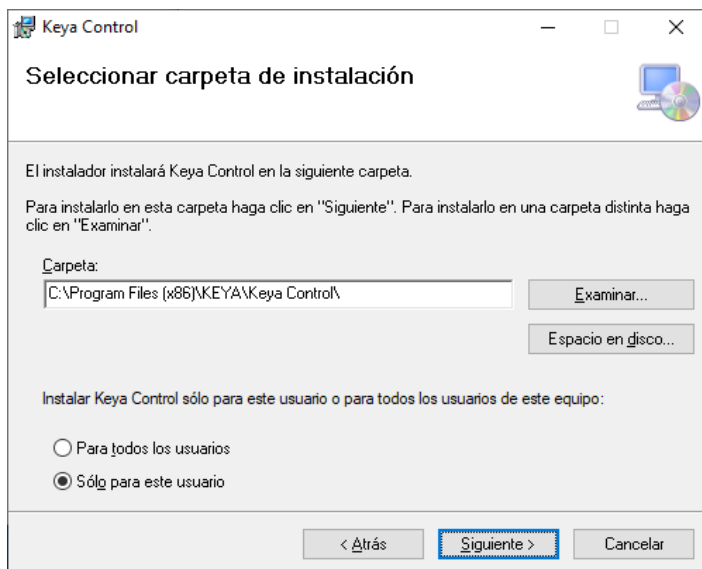


Figure 2: Installation process

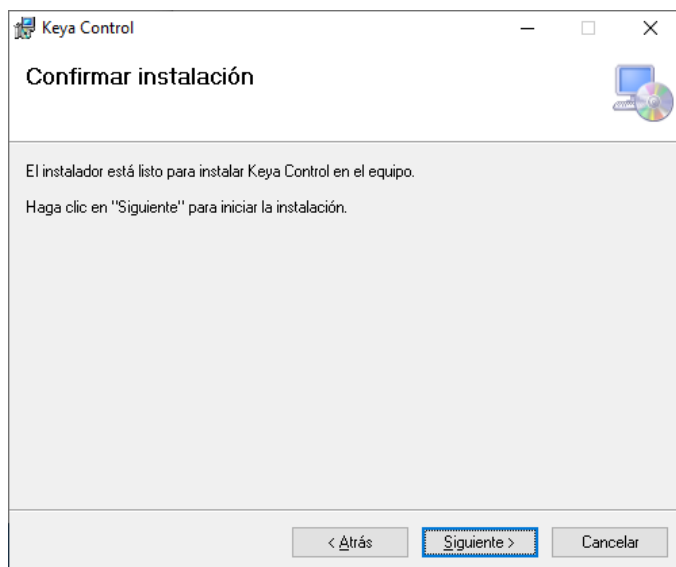


Figure 3: Installation process

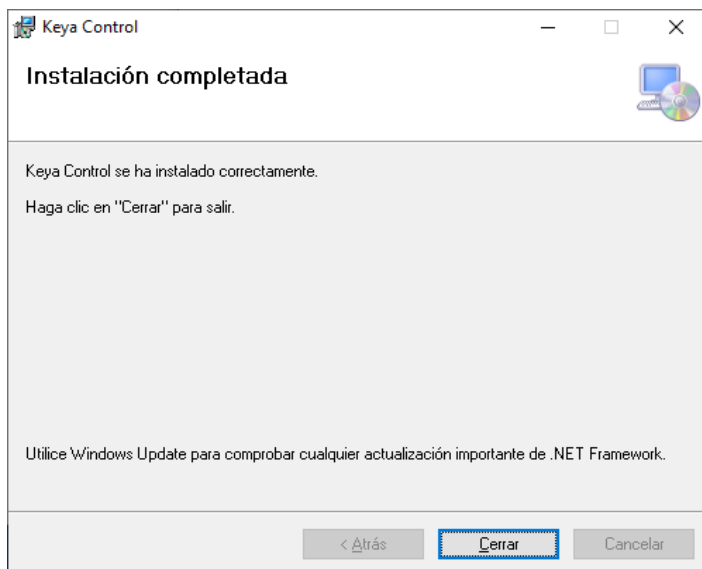


Figure 4: Installation process

- III. The shortcut will be created automatically in the Windows Menu and on the Desktop

2. Log in

- I. Run the program and log in with the Username (User) and Password (Password) received by email

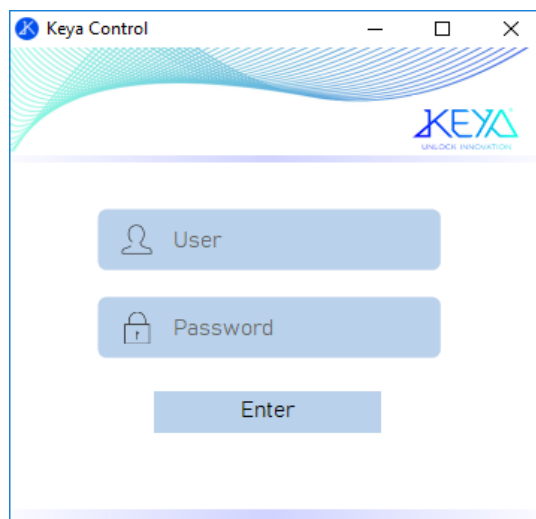


Figure 5: Main screen

- II. Create a new password. (It must be greater than 4 digits and different from the previous one)

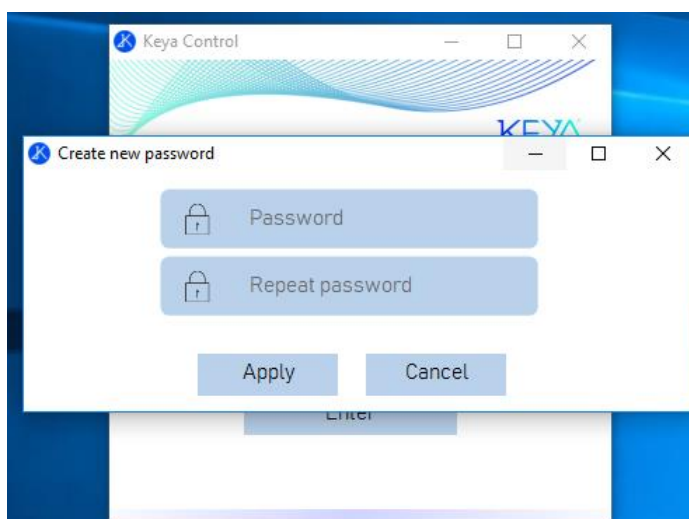


Figure 6: Create new password

III. When logging in for the first time, enter the License Code and press Enter

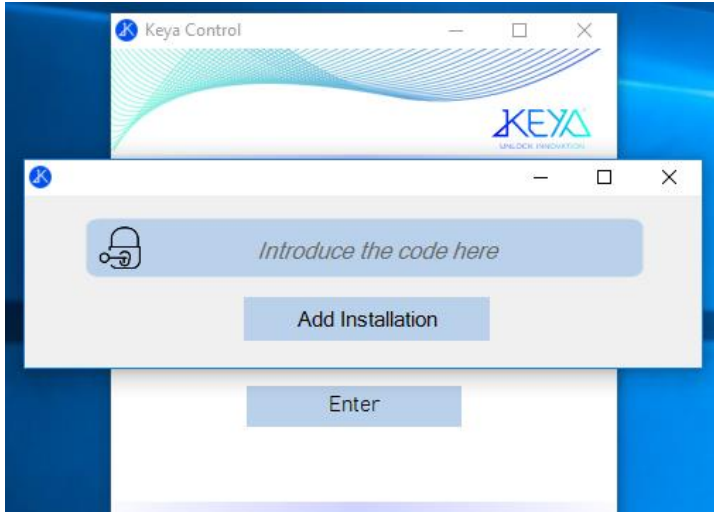


Figura 7: Introducción Código Licencia

IV. The initial loading screen will appear

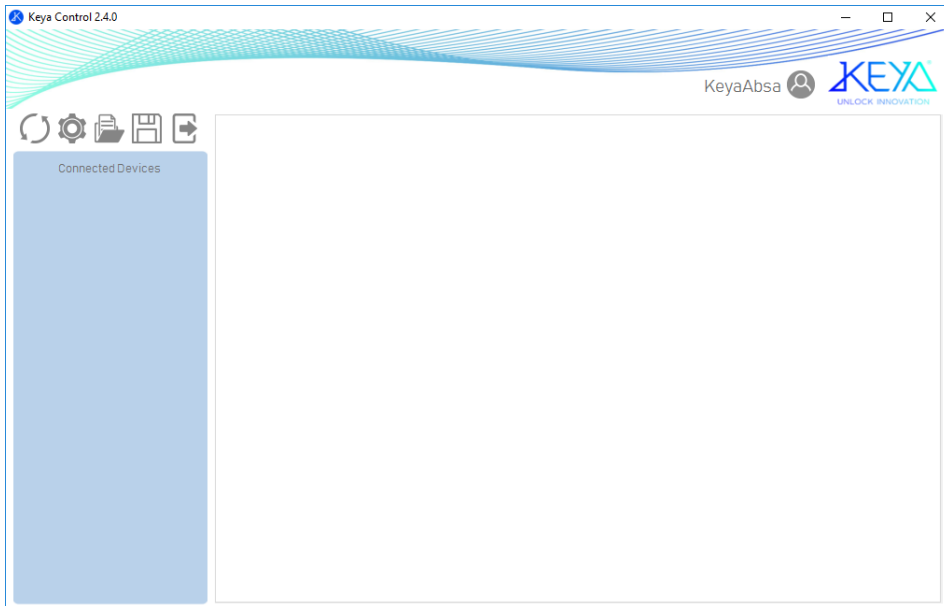


Figure 8: Initial screen

3. Keya Control Software Interface

The program is divided into three sections (see figure 9):

- 1) The parameter and information loading screen.
- 2) The column of devices connected to the PC.
- 3) The options (see table 1), which will always be accessible.



Figure 9: Initial loading screen






Options		
Icon	Name	Description
	Update	Pressing this icon executes the action of refreshing the software.
	Configuration	Open the Settings panel (see Fig 4).
	Open configuration file	Open a configuration file for the connected device.
	Save configuration	Allows saving the parameters of a connected device in a configuration file.
	Exit	Close the program.

Table 1. KEYA Control options.

4. Panel de configuración de Keya Control

Pressing the settings icon the configuration panel opens, with its sections (see table 2):

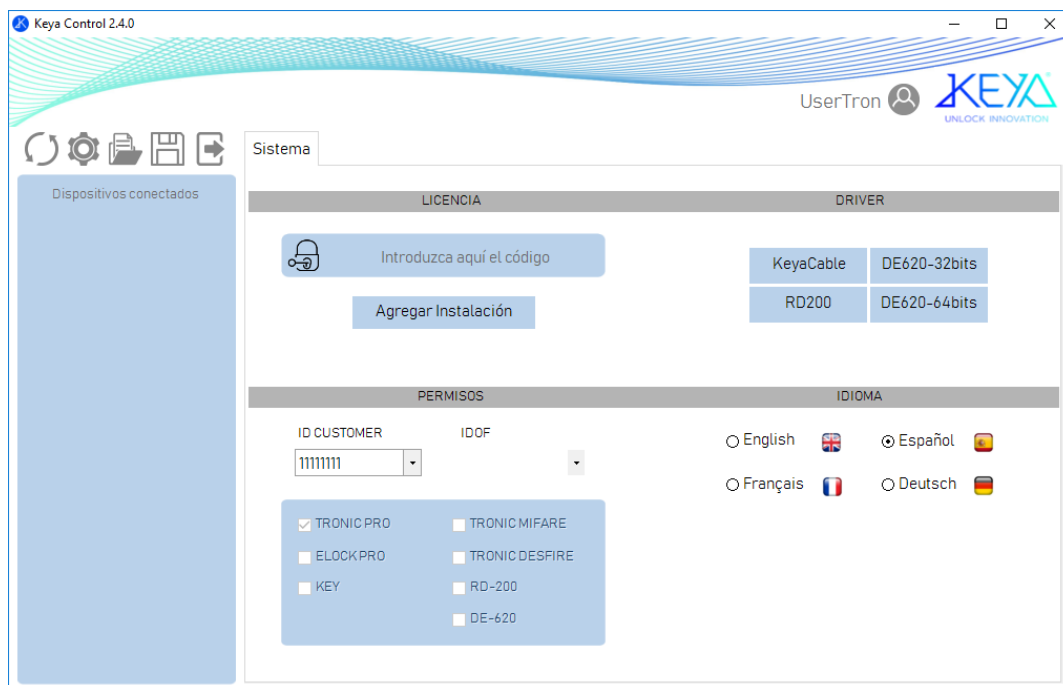


Figure 10: Configuration Panel

	To add new license codes.
	It shows you the list of ID Customer and / or IDOF associated with the added licenses.
	This section gives you the option of installing the drivers if they are not detected by the operating system.
	You can change to Spanish, English, German or French

Table 2: Sections of the configuration panel

5. Keya Control data sheet and compatibilities

Classification:	Software. User interface. Programming for production.
Operating systems	Windows versions: 10, 7* y XP*
S.O Permissions	Administrator
Antivirus /Firewall	Disable the firewall in case of installation error.
Minimum screen resolution	1280 x 768
Applications / Features	Final user, schools, offices, gyms....
Description	Keya electronic lock management system.
App size and version	15,0 MB 2.4.0 Version
Manufacturer's website	http://www.keya.es/
Contact	comercial@keya.cat

Compatible versions and devices	
Tronic Pro	1.111, 1.110, 1.009
Elock Pro	1.013
Tronic Mifare	2.113
Tronic Desfire	1.110
Coverk	1.025
Communication key	41800.COM
Settings key	41800.PARAM
Master key	41800.MASTER
Table reader:	DE620
	RD200**
Connection cables:	RS232-USB serial converter**
	RS232-miniUSB cable**
	Adaptor

* Its installation is not recommended without an official technical support . Requires .NET Framework version v4.6.1 (NDP461-KB3102438-web).

** Not recommended for new installations.

- I. The program only allows one open session.
- II. Inactive mode: The program will turn off automatically after 1h without activity.
- III. In case of manual update, first uninstall the program.

